



Glade® Automatic Spray Air Freshener Holder

Fill any room with your favorite Glade® fragrances.



 
Product Description

Express yourself with Glade® Automatic Spray Holder. Glade® air freshener fragrance is crafted by master perfumers. Pick a fragrance and switch things up with automatic air freshener dispenser. Open the unit by squeezing the ribs on the side while pulling sides of holder apart. Insert Glade® automatic spray refill and choose the time setting to release fragrance. This automatic air freshener spray gives a fresh burst every 9, 18 or 36 minutes. Surround yourself with room freshener fragrance infused with essential oils and let your air add an extra special personal touch to your decorating.

Features & Benefits:

- Energize your air instantly with Glade® Automatic Spray Air Freshener
- Enjoy a fresh burst every 9, 18 or 36 minutes for a timed fragrance release
- Let your air add an extra special personal touch to your decorating with Glade® automatic spray
- This Glade® air freshener fragrance is crafted by master perfumers and infused with Essential Oils
- Boost the fragrance of any room with battery operated air freshener


Where to use: Use in any room where an instant releasing fragrance burst is needed.



Entrance and
reception areas



 Hallways
and corridors



Restrooms



Meeting rooms



Cafeterias &
break rooms

Glade® Automatic Spray Air Freshener Holder

ODOR FIGHTING.

Safety Information:

CAUTION: CONTENTS UNDER PRESSURE.

Contains propellants. Do not expose to heat or store at temperatures above 120°F. Do not puncture or incinerate container.

EYE IRRITANT. Contains acetone. Avoid contact with eyes.

FIRST AID: EYES: Immediately rinse eyes with plenty of water for at least 15 minutes. If irritation persists, get medical attention.

Do not use in small confined animal areas without adequate ventilation.

KEEP OUT OF REACH OF CHILDREN AND ANIMALS.

Directions for Use:

Operation:

Please read and retain all safety use instructions.

To open unit:

 
- Press button at top, while pulling sides of holder apart.
- When unit is open, always make sure the timer is set to OFF position and keep spray nozzle pointed away from face.

To insert can:

- Open unit.
- Pull out red tab to activate batteries.
- Remove the cap from the can and insert the can with the nozzle facing out.
- Turn the unit on by selecting your desired time setting in minutes, and close the unit. A spray will occur at the selected time interval.
- For an instant burst of Glade® fragrance anytime, press the boost button on the back of the unit.

Replacing the battery:

- Open unit and remove the can to access the batteries.
- Remove old batteries and replace with two new alkaline batteries.
- Replace can, set timer, and close unit.

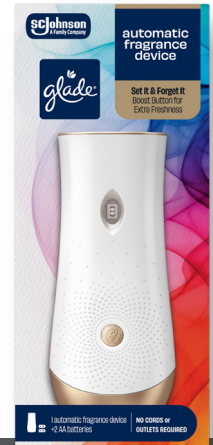

Stock Code:
329348

Pack Sizes:
4/cs

UPC Case Code.:
10046500774727

Glade® fragrance spray sold separately

Glade® Automatic Spray Air Freshener Refills



10046500038157



10046500054065



10046500037471

SAFETY DATA SHEETS

For Safety, Environmental, Handling, First Aid and Disposal information please refer to the Safety Data Sheet which can be downloaded from <https://www.scjp.com/en-us/safety-data-sheets>

Please refer to label or SDS sheet for safety information

SC Johnson Professional USA, Inc.
2815 Coliseum Centre Dr.
Suite 600,
Charlotte, NC 28217
United States

Telephone: +1 800 248 7190
www.scjp.com

This information and all further technical advice is based upon our present knowledge and experience. However, it implies no liability or other legal responsibility on our part, including with regard to existing third party intellectual property rights, especially patent rights. In particular, no warranty, whether express or implied, or guarantee of product properties in the legal sense is intended or implied. We reserve the right to make any changes according to technological progress or further developments.

© 2026 SC Johnson Professional USA, Inc.

scJohnson
PROFESSIONAL
A family company®